

HEATING INPUT: 60,000–80,000 BTU/H

## ULTRA LOW NOX, SINGLE-STAGE VARIABLE-SPEED ECM GAS FURNACE UP TO 96% AFUE



### Contents

Nomenclature.....	2
Product Specifications.....	3
Dimensions .....	4
Airflow Specifications.....	5
Accessories .....	5
Wiring Diagram.....	6

### Standard Features

- Integrated communicating ComfortBridge™ Technology
- Commissioning and diagnostics via indoor board Bluetooth with the CoolCloud™ phone and tablet application
- Heavy-duty stainless-steel tubular heat exchanger
- Super-ferritic Stainless-steel secondary heat exchanger
- Single-stage gas valve
- Durable Silicon Nitride igniter
- Quiet modulating induced draft blower
- Self-diagnostic control board with constant memory fault code history output to 3 x 7 segment display
- Eligible for installation in California's South Coast Air Quality Management District (SCAQMD) and San Joaquin Valley Air Pollution Control District (SJVUAPCD). This furnace complies with the 14 ng/J NOx emission limit in SCAQMD Rule 1111 and SJVUAPCD Rule 4905.
- EMI line filter kit must be installed. (It is intended for field installation only on "VS" model, Bluetooth® capable Ultra Low NOx Gas Furnaces. The purpose of the EMI Filter is to reduce electromagnetic interference between the furnace and other electrical devices)
- AHRI Certified; ETL Listed

### Cabinet Features

- Designed for multi-position installation — upflow, horizontal left or right
- Certified for direct vent (2-pipe) or non-direct vent (1-pipe)
- Easy-to-install top venting with optional side venting
- Convenient left or right connection for gas and electrical service
- Cabinet air leakage ( $Q_{Leak} \leq 1.4\%$ )
- Heavy-gauge steel cabinet with durable finish
- Fully insulated heat exchanger and blower section
- Airtight solid bottom or side return with easy-cut tabs for effortless removal in bottom air-inlet applications



\* Complete warranty details available from your local dealer or at [www.amana-hac.com](http://www.amana-hac.com). To receive the Lifetime Heat Exchanger Limited Warranty, the Lifetime Unit Replacement Limited Warranty (in both cases good for as long as you own your home), and the 10-Year Parts Limited Warranty, online registration must be completed within 60 days of installation. Online registration is not required in California or Québec.



	AMVS96 0603BUA*	AMVS96 0805CUA*
<b>HEATING DATA</b>		
BTUH Input <sup>1</sup>	60,000	80,000
BTUH Output <sup>1</sup>	57,600	76,800
AFUE <sup>2</sup>	96	96
Temperature Rise Range (°F)	30- 60	30- 60
Vent Diameter <sup>3</sup>	2"- 3"	2"- 3"
No. of Burners Ports	1 Burner, 3 Tubes	1 Burner, 4 Tubes
<b>CIRCULATOR BLOWER</b>		
Available AC @ 0.5" ESP	1.5- 3	2- 5
Size (D x W)	11" x 8"	11" x 10"
Horsepower @ 1075 RPM	0.5	1
Speed	VS ECM	VS ECM
<b>FILTER SIZE (IN<sup>2</sup>) (QTY)</b>	(1) 16 x 25 (side or bottom)	(1) 20 x 25 (bottom) or (2) 16 x 25 (side)
<b>ELECTRICAL DATA</b>		
Min. Circuit Ampacity <sup>4</sup>	8.8	15.4
Max. Overcurrent Device (amps) <sup>5</sup>	15	20
<b>SHIPPING WEIGHT (LBS)</b>	122	147

<sup>1</sup> For Use with Natural Gas Only. For altitudes + 4,500 ft above sea level, see installation manual

<sup>2</sup> DOE AFUE based upon Isolated Combustion System (ICS)


<sup>3</sup> Installer must supply one or two PVC pipes: one for combustion air (optional) and one for the flue outlet (required). Vent pipe must be either 2" or 3" in diameter, depending upon furnace input, number of elbows, length of run and installation (1 or 2 pipes). The optional Combustion Air Pipe is dependent on installation/code requirements and must be 2" or 3" diameter PVC.

<sup>4</sup> Minimum Circuit Ampacity = (1.25 x Circulator Blower Amps) + ID Blower amps. Wire size should be determined in accordance with National Electrical Codes. Extensive wire runs will require larger wire sizes.

<sup>5</sup> Maximum Overcurrent Protection Device refers to maximum recommended fuse or circuit breaker size. May use fuses or HACR-type circuit breakers of the same size as noted.

**NOTES**

- All furnaces are manufactured for use on 115 VAC, 60 Hz, single-phase electrical supply.
- Gas Service Connection ½" FNPT
- Important: Size fuses and wires properly and make electrical connections in accordance with the National Electrical Code and/or all existing local codes.
- For bottom return: Failure to unfold flanges may reduce airflow by up to 18%. This could result in performance and noise issues.
- For servicing or cleaning, a 24" front clearance is required. Unit connections (electrical, flue and drain) may necessitate greater clearances than the minimum clearances listed above. In all cases, accessibility clearance must take precedence over clearances from the enclosure where accessibility clearances are greater.

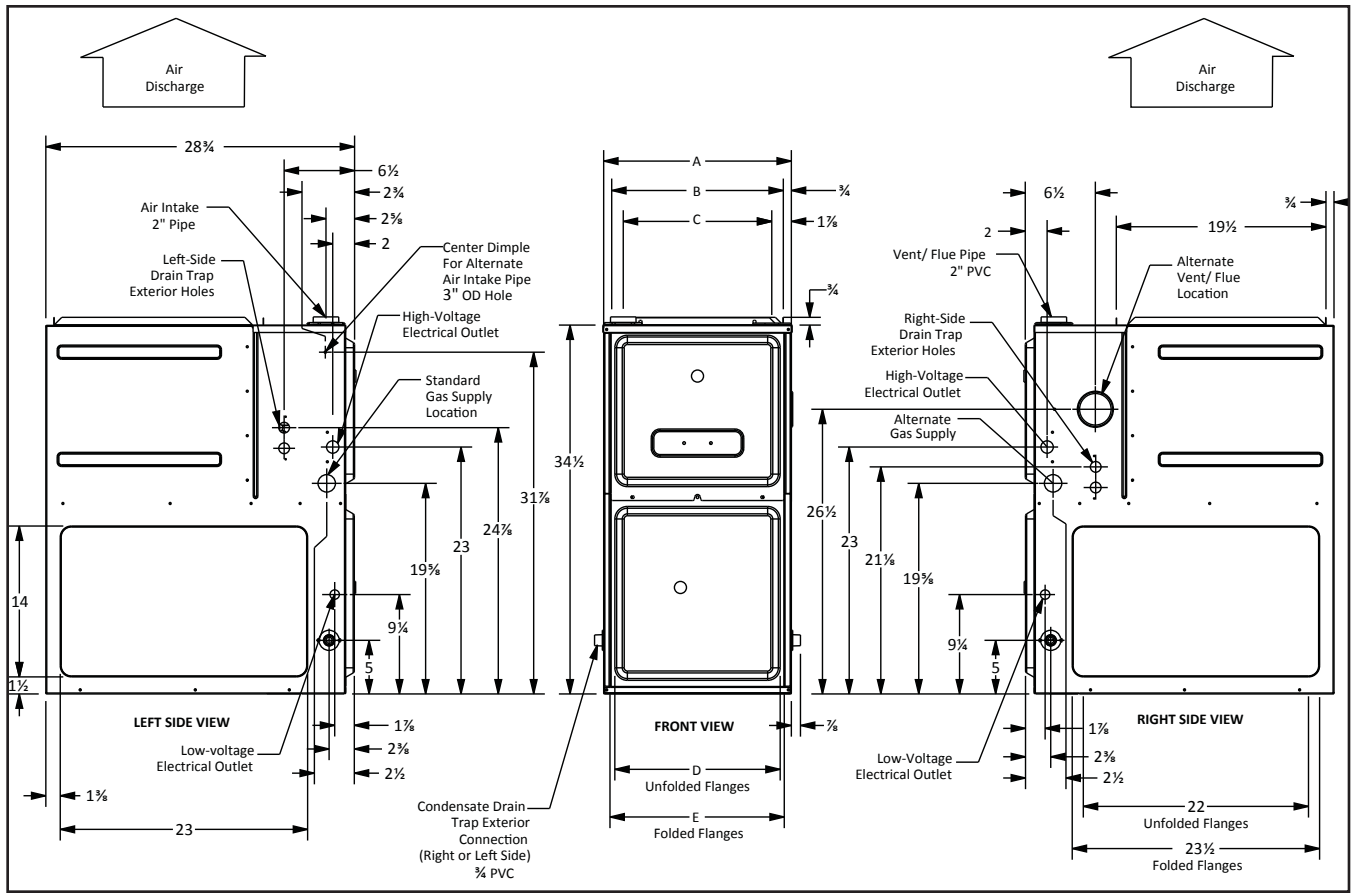

MODEL	W	D	H
AMVS960603BU	17 1/2"	28 7/8"	34 1/2"
AMVS960805CU	21"	28 7/8"	34 1/2"

	AIR DISCHARGE			AIR RETURN	
	A	B	C	D	E
	17 1/2"	16"	13 7/8"	12 1/8"	13 5/8"
	21"	19 1/2"	17 7/8"	16"	17 1/2"

MINIMUM CLEARANCES TO COMBUSTIBLE MATERIALS

POSITION	SIDES	REAR	FRONT	BOTTOM	FLUE	TOP
Upflow	0"	0"	3"	C	0"	1"
Horizontal	6"	0"	3"	C	0"	6"

C = If placed on combustible floor, the floor MUST be wood ONLY.

**(CFM & TEMPERATURE RISE VS. EXTERNAL STATIC PRESSURE)**

MODEL / TEMP RISE RANGE	AMVS960603BUA* 30-60 (45)		AMVS960805CUA* 30-60-(45)	
	CFM	RISE	CFM	RISE
Recommended CFM for Heat Mode / Expected Temperature Rise	1185	45	1580	45
Lowest Recommended CFM for Heat Mode / Expected Temperature Rise	889	60	1185	60
Maximum CFM for Heat Mode / Expected Temperature Rise	1400 (MAX CAPABLE CFM)	38	2200 (MAX CAPABLE CFM)	32

**Note:** To Set Heating CFM Using Push Buttons; 1) Scroll using Left or Right push buttons until gAF appears on the 7 segment display. 2) Press & release center button & display will show current heating airflow expressed as a percentage of max CFM. 3) Press & release Left or Right button until desired percentage appears. 4) Press & release center button once more to select the displayed percentage. 5) CFM may be trimmed further by using the gTF menu.


**ACCESSORIES**

MODEL	DESCRIPTION	AMVS96 0603BU	AMVS96 0805CU
72950	Concentric Vent Kit (2")	√	√
72951	Concentric Vent Kit (3")	√	√
RF000142	Drain Kit Horizontal Left Vertical Flue	√	√
EFR02	External Filter Rack with 16"x25" Permanent Filter	√	—
O170K00000S	Flush Mount Vent Kit- 3" or 2"	√	√
O170K00001S	Flush Mount Vent Kit- 2"	√	√
O270F05404	Horizontal Drain Tubing Kit	√	√

**MINIMUM FILTER SIZES**

	AMVS96 0603BU	AMVS96 0805CU
Filter Size (in <sup>2</sup> ) (Qty)	(1) 16 x 25 (side or bottom)	(1) 20 x 25 (bottom) or (2) 16 x 25 (side)

Note: Other size filters of equal or greater dimensions may be used. Filters may also be centrally located.

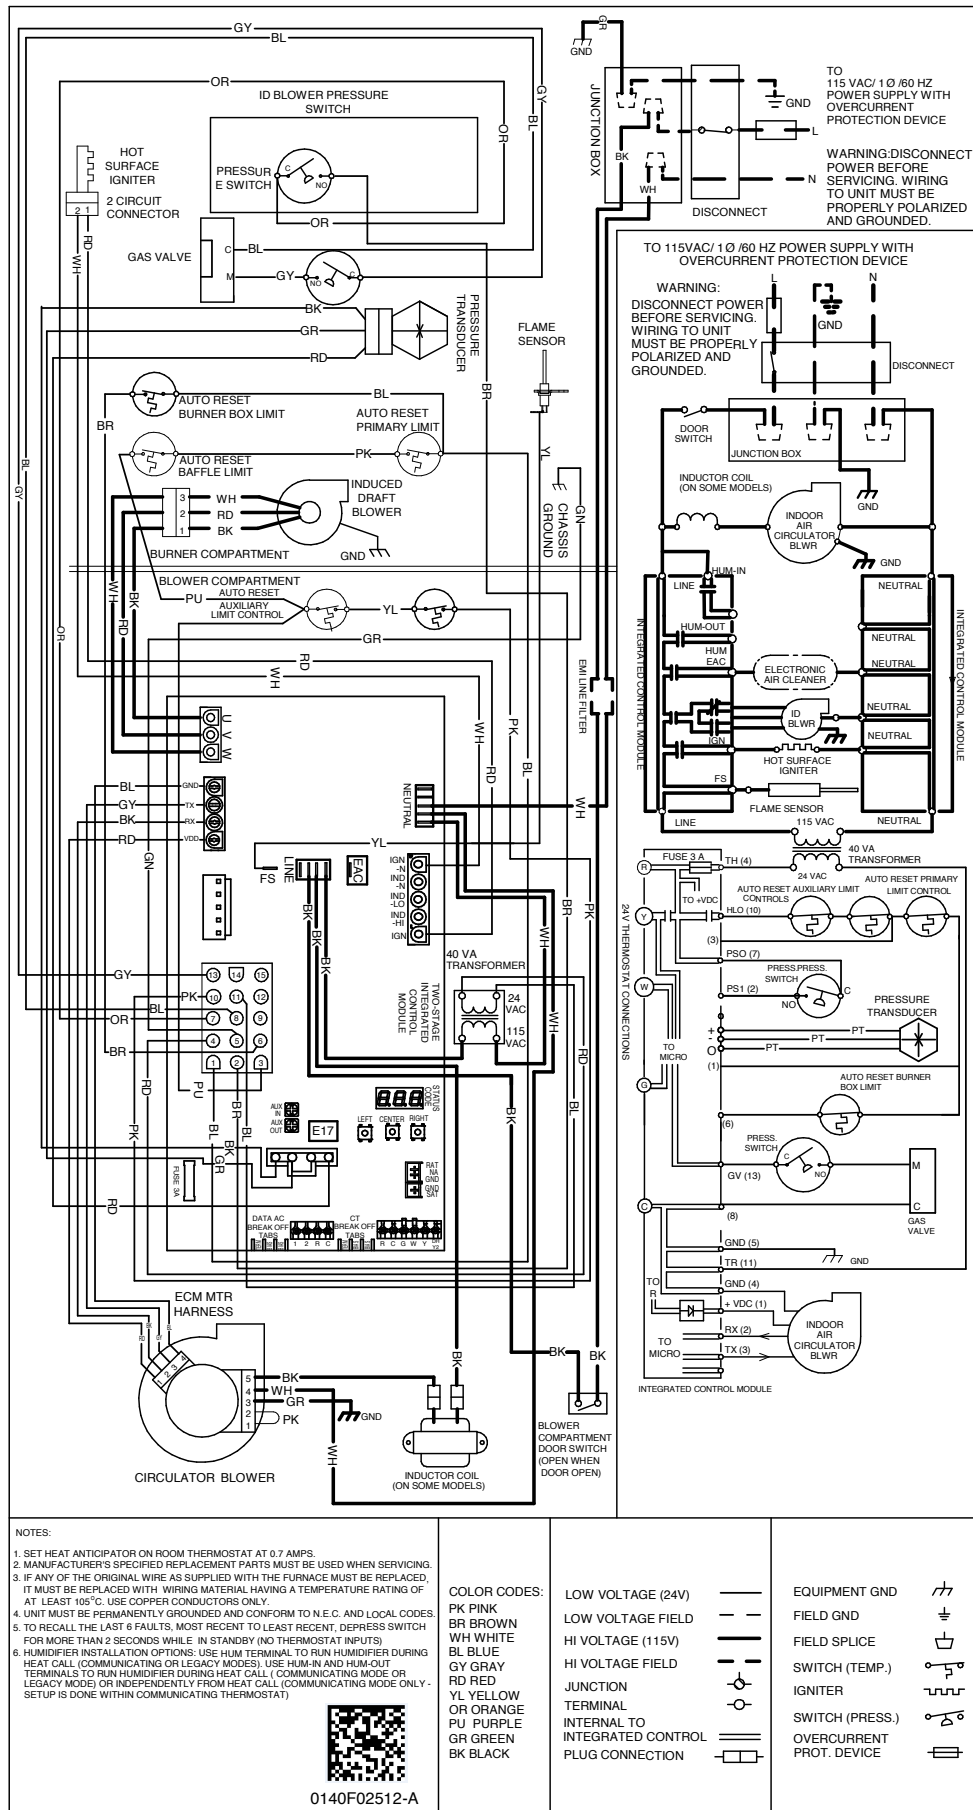

**NOTES:**


1. SET HEAT ANTICIPATOR ON ROOM THERMOSTAT AT 0.7 AMPS.
2. MANUFACTURER'S SPECIFIED REPLACEMENT PARTS MUST BE USED WHEN SERVICING.
3. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE FURNACE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105°C. USE COPPER CONDUCTORS ONLY.
4. UNIT MUST BE PERMANENTLY GROUNDED AND CONFORM TO N.E.C. AND LOCAL CODES.
5. TO RECALL THE LAST 6 FAULTS, MOST RECENT TO LEAST RECENT, DEPRESS SWITCH FOR MORE THAN 2 SECONDS WHILE IN STANDBY (NO THERMOSTAT INPUTS).
6. HUMIDIFIER INSTALLATION OPTIONS: USE HUM TERMINAL TO RUN HUMIDIFIER DURING HEAT CALL (COMMUNICATING OR LEGACY MODES). USE HUM-IN AND HUM-OUT TERMINALS TO RUN HUMIDIFIER DURING HEAT CALL (COMMUNICATING MODE OR LEGACY MODE) OR INDEPENDENTLY FROM HEAT CALL (COMMUNICATING MODE ONLY - SETUP IS DONE WITHIN COMMUNICATING THERMOSTAT)

**COLOR CODES:**  
 PK PINK  
 BR BROWN  
 WH WHITE  
 BL BLUE  
 GY GRAY  
 RD RED  
 YL YELLOW  
 OR ORANGE  
 PU PURPLE  
 GR GREEN  
 BK BLACK

0140F02512-A

**LOW VOLTAGE (24V)**  
 LOW VOLTAGE FIELD  
**HI VOLTAGE (115V)**  
 HI VOLTAGE FIELD  
 JUNCTION  
 TERMINAL  
 INTERNAL TO INTEGRATED CONTROL  
 PLUG CONNECTION

**EQUIPMENT GND**  
 FIELD GND  
 FIELD SPLICE  
 SWITCH (TEMP.)  
 IGNITER  
 SWITCH (PRESS.)  
 OVERCURRENT PROT. DEVICE

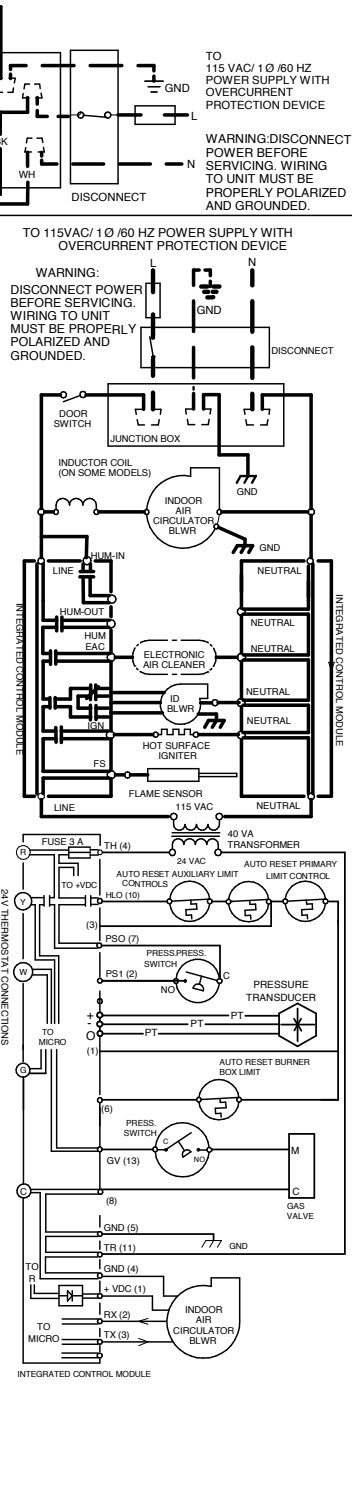

**High Voltage:** Disconnect all power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury, or death.

**WARNING**

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

